


**WIRELESS
TRAVEL CHARGER
FOR iPhone & APPLE WATCH**

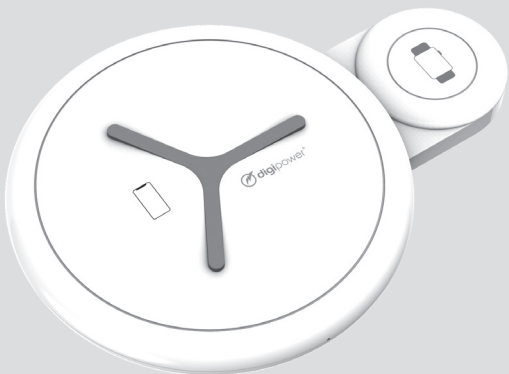


QUICK GUIDE

Item No. WPC-A10WK

English

PRODUCT CONTENTS

1. Charging pad
2. Charging cable
3. QC3 Wall charger

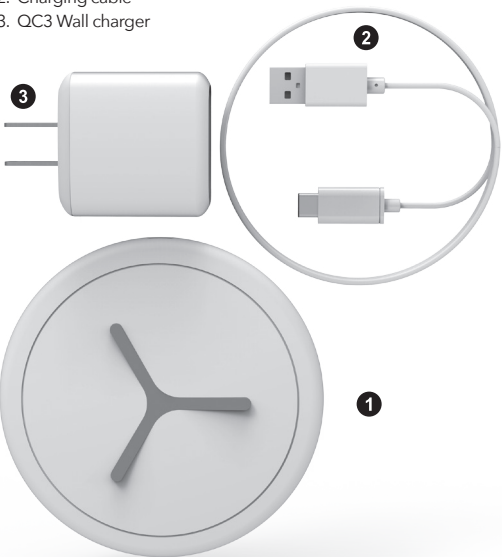

**PRODUCT SPECIFICATIONS
CHARGE PAD**

Input power: 5V/2A, 9V/2A
Output power: 5W/7.5W/10W


AC ADAPTER

QC 3.0 Wall charger
Input: AC 100-240V 50/60Hz
QC3.0 Output: 3.6-6.5V 3A, 6.5-9V 2A, 9-12V 1.5A

English

PRODUCT INTRODUCTION

Type-C USB input

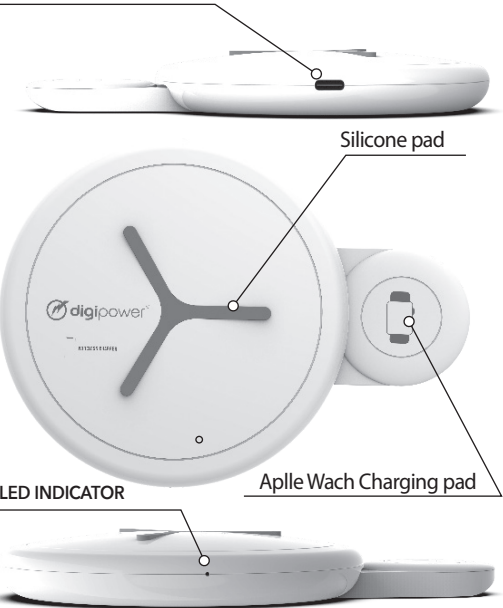

INSTRUCTIONS FOR CHARGING A PHONE

- Check your phone's user guide to make sure it supports wireless charging
- Using the included cable and wall charger, connect the charge pad to a wall outlet.
- Place your phone on the charge pad to begin charging.
Your phone's battery indicator will let you know it is charging.

English

- If it does not charge move the phone on the pad slightly to better align the charge pad transmitter with the wireless receiver in your phone



INSTRUCTIONS FOR CHARGING AN APPLE WATCH

- Slide the small charging pad out from the side of the housing
- With the charge pad plugged in as noted above, place your watch on the small charge pad.
- Your watch will indicate it is charging

LED LIGHT PATTERN

- When first connected to power the LED will blink blue and green then turn off.
- When a phone is placed on the charging pad the blue LED will turn on.
- For Samsung phones the LED will turn green once the phone is fully charged.
- For iPhone the LED will turn green about 30 minutes after it is fully charged.

- Note: If something other than a wireless enabled phone is placed on the charge pad the LED will blink blue and green.
- Note: The LED cannot be used as a charge indicator for watch charging, check the watch face to know when it is charged.

English

digipower™

Questions? Problems? Picked up the wrong item?
Before returning to the Store, please give our customer service team a chance to help.
Email us at TechSupport@Mizco.com for a seamless and speedy resolution.

Mizco International, Inc.
Cranford, New Jersey
All rights reserved.
DIGIPOWER is a registered trademark of Mizco International Inc.

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

ICES

This Class B digital apparatus complies with Canadian ICES-003.


WARRANTY

WARRANTY INFORMATION FOR DIGIPOWER PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC.
We warrant all DigiPower branded products against defects in material and workmanship for one year from the original date of purchase. At our option, we shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase in order to obtain any warranty service. This warranty is void if the product has been handled or used in any manner which is inconsistent with the instructions accompanying the product or the intended use of the product. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not extend to equipment used with the product. This warranty is valid only if the product is used on a compatible device as specified on or attached to the product package. To verify compatibility, please check the product package for details or visit: www.DigiPowerSolutions.com.
Repair or replacement, as provided under this warranty, is your exclusive remedy. We shall not be liable for any incidental or consequential damages. DigiPower hereby expressly disclaims any and all implied warranties of merchantability and fitness for a particular purpose.
Some states/countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
Some states/countries do not allow limitations on implied warranties, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and country to country.



CONTENU DE L'EMBALLAGE

1. Socle de charge
2. Câble de charge
3. Chargeur mural QC3

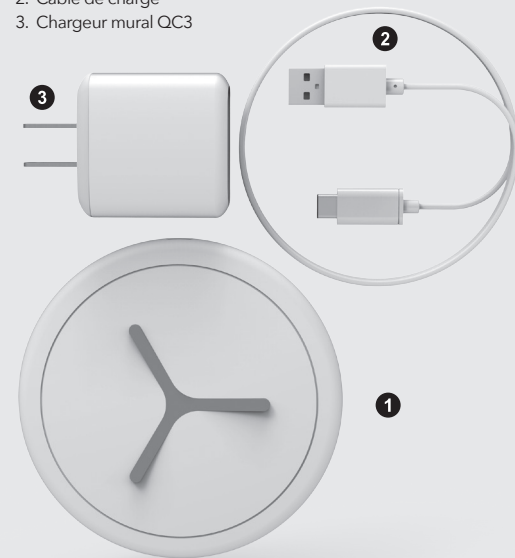

Courant d'entrée : 5V/2A, 9V/2A
Courant de sortie : 5W/ 7,5W/ 10W

ADAPTATEUR C.A.


Chargé mural QC 3.0

Entrée : 100-240 V c.a., 50/ 60Hz

Sortie QC 3.0 : 3,6-6,5V 3A, 6,5-9V 2A, 9-12V 1,5A

PRÉSENTATION DU PRODUIT

Entrée USB de Type-C

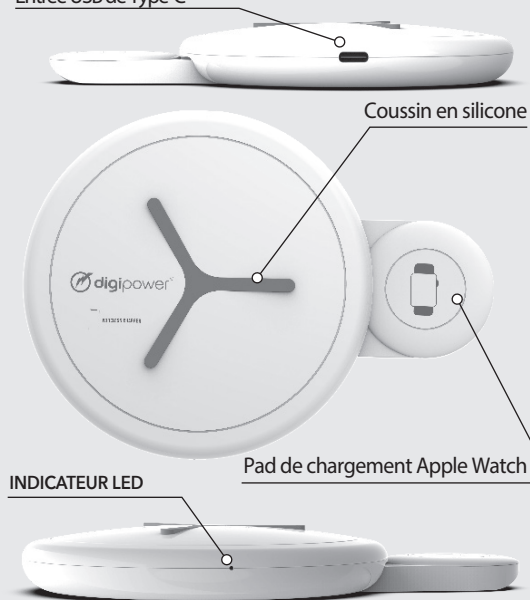

INDICATEUR LED

INSTRUCTIONS CONCERNANT LA RECHARGE D'UN TÉLÉPHONE

- Vérifiez le guide d'utilisation de votre téléphone pour vous assurer qu'il permet la recharge sans fil
- À l'aide du câble et du chargeur mural fournis, branchez le socle de charge sur une prise murale.
- Placez votre téléphone sur le socle pour amorcer la recharge. L'indicateur de charge de votre téléphone vous indiquera que la charge est en cours.

- Si ce n'est pas le cas, déplacez légèrement le téléphone sur le socle de façon à mieux aligner l'émetteur avec l'émetteur sans fil de votre téléphone



INSTRUCTIONS CONCERNANT LA RECHARGE D'UNE MONTRE APPLE

- Faites glisser le petit socle de charge sur le côté du boîtier
- Avec le socle de charge branché comme on l'indique ci-dessus, déposez votre montre sur le petit socle sur le côté.
- Votre montre indiquera que la charge est en cours

VOYANT DEL

- Lorsqu'on le branche pour la première fois sur une source d'alimentation, le voyant DEL clignote en bleu et vert, puis s'éteint.
- Lorsqu'on dépose un téléphone sur le socle de charge, le voyant bleu s'allume.
- Dans le cas d'un téléphone Samsung, le voyant s'allume en vert une fois qu'il est complètement chargé.
- Dans le cas d'un iPhone, le voyant s'allume en vert pendant 30 minutes environ une fois qu'il est complètement chargé.

- Remarque : Si un appareil autre qu'un téléphone sans fil est déposé sur le socle de charge, le voyant clignotera en bleu et vert.
- Remarque : Le voyant DEL ne peut pas servir d'indicateur de charge lors de la recharge d'une montre; vérifiez la face de la montre pour savoir si elle est chargée.

LA GARANTÍ



Des questions? Des problèmes?
Vous avez ramassé le mauvais article?
Avant de REVENIR au magasin, laissez la chance à notre
équipe du Service à la clientèle de vous aider.
Email à techsupport@mizco.com
pour que nous puissions corriger rapidement la situation.

RENSEIGNEMENTS SUR LA GARANTIE POUR LES PRODUITS
DIGIPOWER, UNE DIVISION DE MIZCO INTERNATIONAL, INC.

La responsabilité de Mizco en ce qui concerne la présente garantie se limite à la réparation ou au remplacement, à son choix, de tout produit qui arrête de fonctionner lorsque le produit est utilisé de façon normale par le consommateur, pendant une période un ans à compter de la date d'achat du produit. La présente garantie ne couvre pas les dommages ou défauts résultant de tout accident, mauvaise utilisation, négligence, modification, abus ou installation ou entretien inapproprié. Cette garantie ne s'étend pas à l'équipement utilisés avec le produit. Si en tout temps pendant la période un ans suivant l'achat, le produit cesse de fonctionner en raison de tout défaut lié aux matériaux ou à la fabrication, veuillez email TechSupport@Mizco.com pour obtenir un numéro d'autorisation. Pour un service plus rapide, assurez-vous d'avoir une copie du reçu d'achat de votre produit sur lequel est indiqué le numéro de modèle, ainsi que la date et l'endroit où le produit a été acheté. La présente garantie vous donne des droits spécifiques reconnus par la loi. Vous pouvez également avoir d'autres droits qui varient en fonction des États ou des provinces où vous vous trouvez.

